



EXISTING CHIMNEY INSTALLATION GUIDELINES

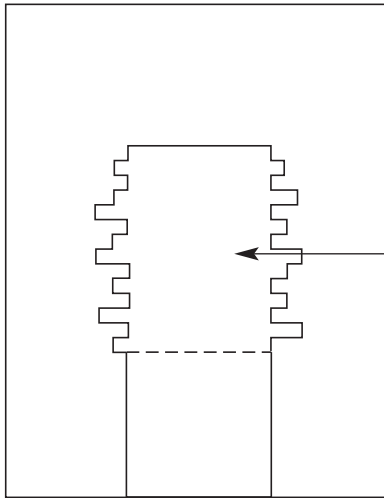


Remove brickwork from above lintel to allow for the heater to be slid into chimney.

NB. Always use a qualified specialist to perform this type of work. Always check the stability and suitability of existing chimneys for this type of installation.

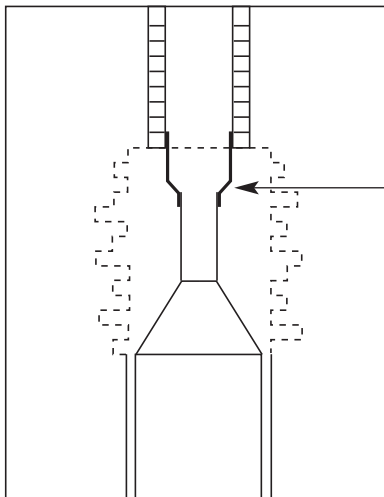

Seal square-to-round adaptor into narrowing of chimney so as to allow smoke to travel the path of the existing chimney. Then allow for the fitting of a hot air grille outlet either at the front or the side of the chimney. The internal brickwork of the chimney must be parged (rendered). If it is not parged a flue must extend from the top of the heater the entire length of the chimney.

Regulation cowl to be fitted to top of chimney to stop rain ingress.

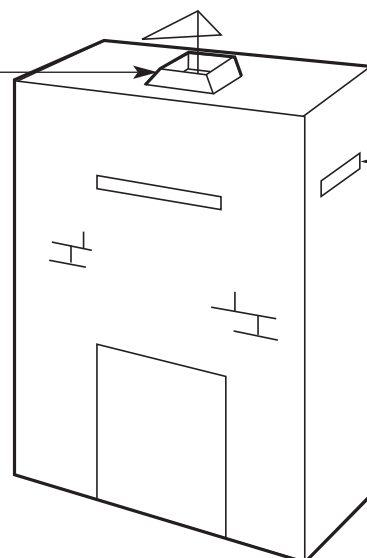

Install side air grille if possible or optional front grille.

**CHEMINÉES
PHILIPPE**
AUSTRALIA

430 Johnston St., Abbotsford, Victoria 3067 Phone: 03 9417 3315
e-mail: sales@wignells.com.au www.chemphilaust.com.au