


FLUE INSTALLATION FOR FULL MASONRY CHIMNEY

Using brickwork from floor to ceiling and triple skin flue through roof

NOTES:

- [1] Determine height of deflector to suit brick course and cut starter flue to achieve setup as per drawing.
- [2] Fit flue adaptor into cast iron collar of firebox gather. Fit starter flue (with gussets) into flue adaptor. Drill through collar and secure with stainless steel screws or rivets x 3.
- [3] All stainless steel inner flues must be joined using stainless steel pop rivets.
- [4] Set deflector plate into course of brickwork by approx 30mm to ensure good seat. The plate also rests on the top of the starter flue gussets.
- [6] Place rockwool blanket (aluminium side down) on top of deflector plate ensuring complete coverage up to sides of brick enclosure and a neat fit around the active flue.
- [7] At the termination height of the flue the active stainless steel inner must be 30mm higher than the top of the chimney plate. The stainless steel skirt is screwed to the crimp of the chimney plate. The stainless steel cowl slides into the neck of the skirt and must locate inside the active flue below. No fixing is to be done to the cowl.
- [8] For exempt model heat transfer is required as per product instruction details.

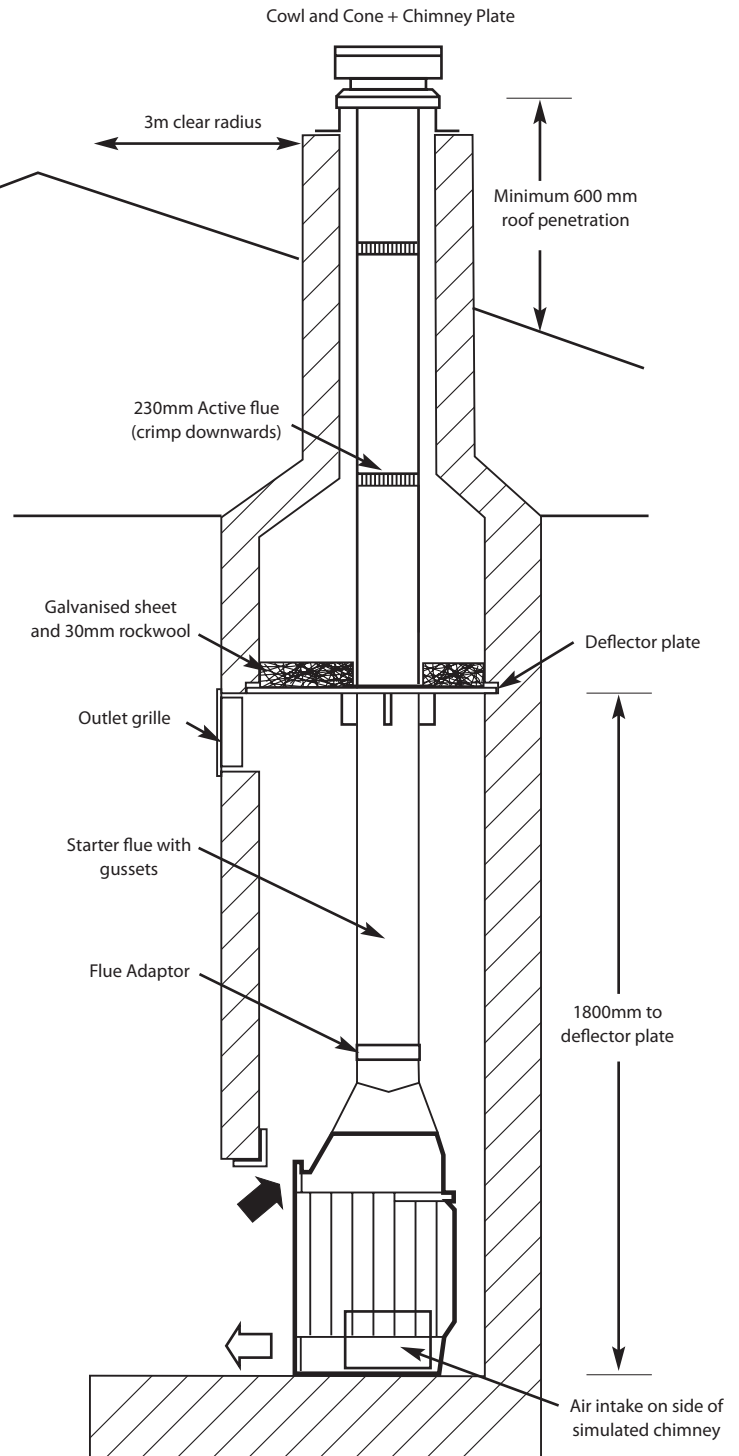

**CHEMINÉES
PHILIPPE**
A U S T R A L I A

430 Johnston St., Abbotsford, Victoria 3067 Phone: 03 9417 3315
e-mail: sales@wignells.com.au www.chemphilaust.com.au