



EXISTING CHIMNEY INSTALLATION GUIDELINES

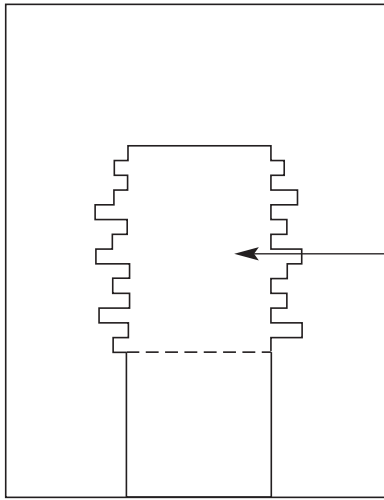

Remove brickwork from above lintel to allow for the heater to be slid into chimney.


NB. Always use a qualified specialist to perform this type of work. Always check the stability and suitability of existing chimneys for this type of installation.

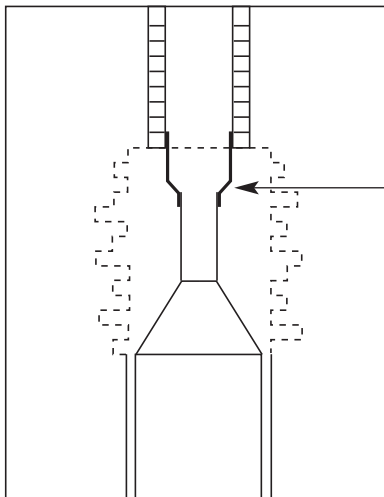

Seal square-to-round adaptor into narrowing of chimney so as to allow smoke to travel the path of the existing chimney. Then allow for the fitting of a hot air grille outlet either at the front or the side of the chimney. The internal brickwork of the chimney must be parged (rendered). If it is not parged a flue must extend from the top of the heater the entire length of the chimney.

Regulation cowl to be fitted to top of chimney to stop rain ingress.

IMPORTANT: Appliance and Flue kit to be strictly installed in accordance to AS/NZS 2918:2001 and the appropriate requirements of the relevant codes. Installer to be a qualified licensed person who we strongly recommend is experienced with this type of installation.

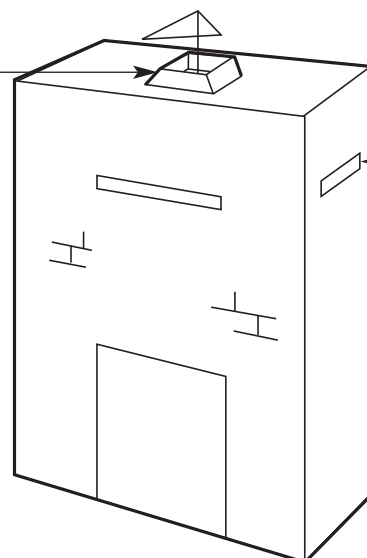

Install side air grille if possible or optional front grille.

**CHEMINÉES
PHILIPPE**
AUSTRALIA

430 Johnston St., Abbotsford, Victoria 3067 Phone: 03 9417 3315
e-mail: sales@wignells.com.au www.chemphilaust.com.au