


FLUE INSTALLATION FOR FREESTANDING CHEMINEES PHILIPPE

NOTES:

- [1] Fit flue adaptor into cast iron collar of firebox gather. Fit starter flue (with gussets) into flue adaptor. Drill through collar and secure with stainless steel screws or rivets x 3.
- [2] All stainless steel inner flues must be joined using stainless steel pop rivets and must be installed crimp end DOWN.
- [3] 9-13" default must start minimum 150mm below ceiling.
- [4] 50mm clearance is required from outer casing to timbers and other combustible material.
- [5] At the termination height of the triple flue the active stainless steel inner must be 30mm higher than the middle and outer galvanised casing. The stainless steel skirt is screwed to the crimp of the outer casing. The stainless steel cowl slides into the neck of the skirt and must locate inside the active flue below. No fixing is to be done to the cowl.

NB: Some Cheminees models may use 10" active flue and 10-14" triple flue.

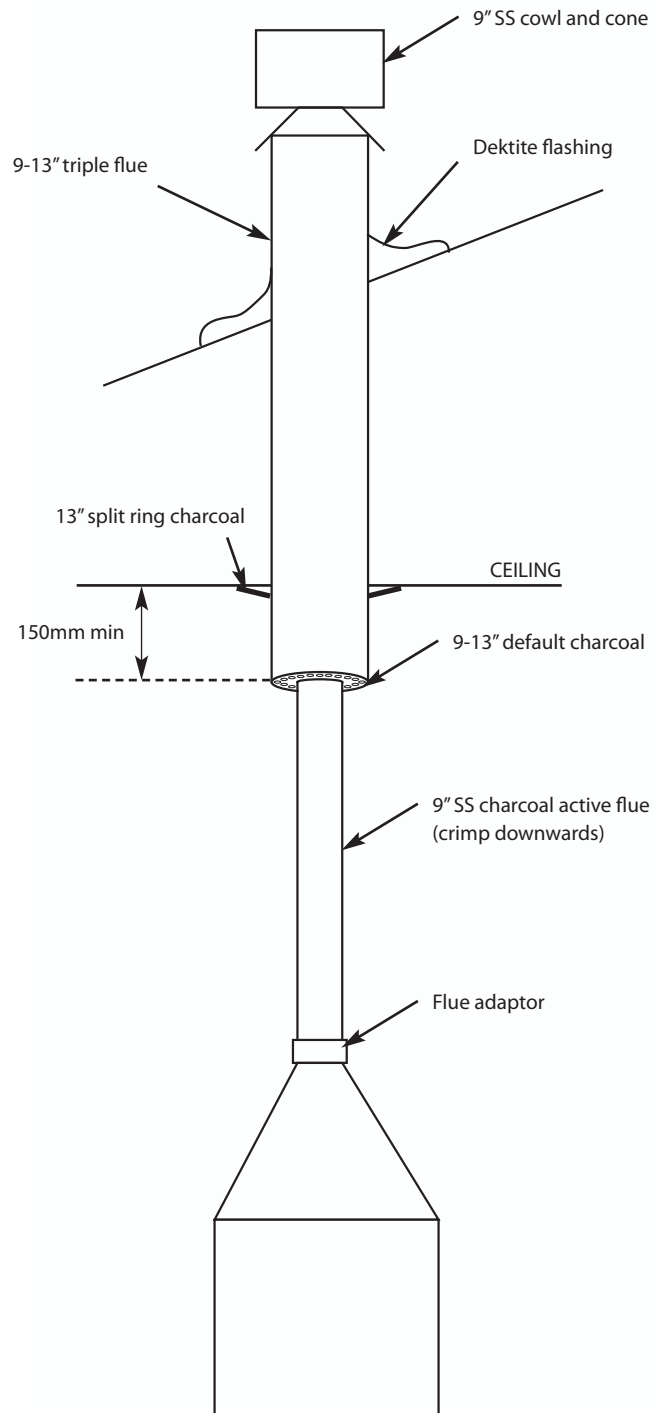

CHEMINÉES
PHILIPPE
A U S T R A L I A

430 Johnston St., Abbotsford, Victoria 3067 Phone: 03 9417 3315
e-mail: sales@wignells.com.au www.chemphilaust.com.au

IMPORTANT: Appliance and Flue kit to be strictly installed in accordance to AS/NZS 2918:2001 and the appropriate requirements of the relevant codes. Installer to be a qualified licensed person.